



INSTRUCTIONS FOR USE AND INSTALLATION OF GAS HOBS



**60 CM - MODEL NUMBER: C6043G-M
PNC NUMBER: 943000737**

**90 CM - MODEL NUMBER: C9053G-M
PNC NUMBER: 943000739**

The manufacturing firm refuses all responsibility for any possible imprecision in this booklet, due to misprints or clerical errors. It reserves the right to make all the changes that it will consider necessary in its own products, without affecting the essential characteristics of functionality and safety.

Dear Customer,

We thank you and congratulate you on granting us your preference, by purchasing one of our products. We are sure that this new appliance, manufactured with quality materials, will meet your requirements in the best possible way.

The use of this new equipment is easy. However, we invite you to read this booklet carefully, before installing and using the appliance.

This booklet gives the right information on the installation, use and maintenance, as well as useful advice.

THE MANUFACTURER

GENERAL NOTICE



We invite you to read this instruction booklet carefully, before installing and using the equipment. It is very important that you keep this booklet together with the equipment for any future consultation.

If this equipment should be sold or transferred to another person, make sure that the new user receives the booklet, so that he can learn how to operate the appliance and read the corresponding notice.

This is a Class 3 appliance.

This appliance complies with the following Directives:

EEC 2009/142/CE	(Gas)	EEC 2004/108/CE	(Electromagnetic Compatibility)
2006/95/CE	(Low Voltage)	EEC 89/109	(Contact with foods)


- The installation must be carried out by experienced and qualified personnel, in conformity with the regulations in force.
- This equipment has been designed to be used by adults.
- Therefore, make sure that children do not go near the equipment to play with it.
- While the appliance is running, watch the children and make sure they neither stay near the equipment, nor touch the surfaces that have not cooled down completely.
- Before switching on the equipment, check that it is properly adjusted for the type of gas at disposal (see the "installation" paragraph).
- Before carrying out maintenance or cleaning the equipment, cut power supply off and let it cool down.
- Make sure that air circulates around the gas equipment. Insufficient ventilation produces a lack of oxygen. In case of an intense or prolonged use of the equipment, it may be necessary to improve aeration, for example by opening a window or increasing the mechanical suction power, if it exists.
- The products of combustion must be discharged outside through a suction hood or an electric fan (see the "installation" paragraph).
- For any possible operation or modification, apply to an authorized Technical Assistance Centre and demand original spare parts.

WARNING:


The product label, with the serial number, is situated under the hob.

The manufacturer refuses all responsibility for possible damages to things or people, resulting from a wrong installation or from an improper, incorrect or unreasonable use of this equipment.

BURNER DESCRIPTION

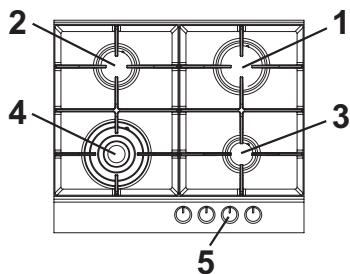


C6043G-M

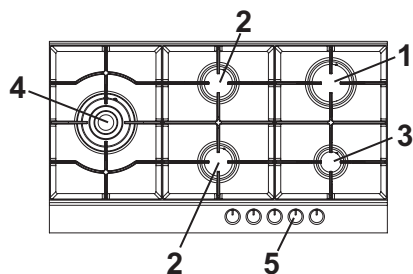

C9053G-M

- | | |
|---------------------------|--------|
| 1 Rapid burner | 3000 W |
| 2 Semi-rapid burner | 1750 W |
| 3 Auxiliary burner | 1000 W |
| 4 Triple ring burner | 3800 W |
| 5 Control knob for burner | |

BURNER CAP ASSEMBLY

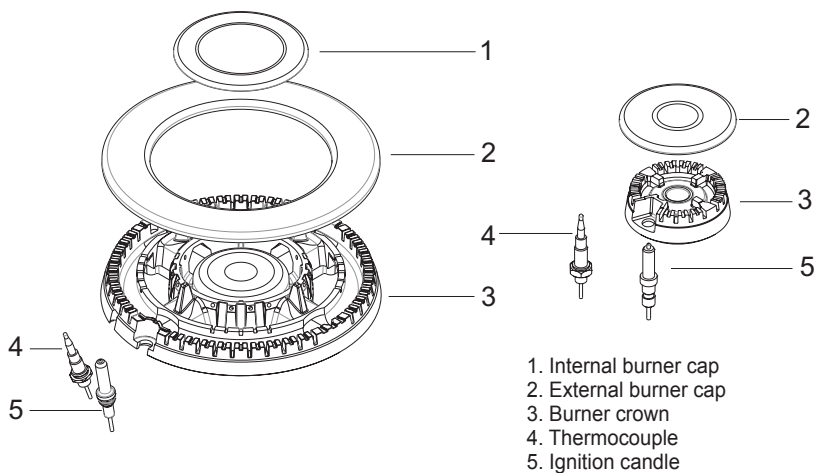

INSTRUCTIONS FOR THE USER



It is necessary that all the operations regarding the installation, adjustment and adaptation to the type of gas available are carried out by qualified personnel, in conformity with the regulations in force.

The specific instructions are described in the booklet section intended for the installer.

USING THE BURNERS

The symbols silk-screen printed on the side of the knob indicate the correspondence between the knob and the burner.

Automatic start-up with valves

Turn the corresponding knob anticlockwise up to the maximum position (large flame, fig.1) and press the knob.

Once the burner has been started up, keep the knob pressed for about 6 seconds.

Using the burners

In order to obtain the maximum yield without waste of gas, it is important that the diameter of the pot is suitable for the burner potential (see the following table), to avoid the flames around the bottom of the pot (fig. 2). Use the maximum capacity to quickly make liquids reach the boiling temperature, and use reduced capacity to heat food or maintain boiling. All of the operating positions must be chosen between the maximum and the minimum ones, never between the minimum position and the closing point. The gas supply can be interrupted by turning the knob clockwise up to the closing position. If there is no power supply, it is possible to light the burners with matches, setting the knob to the startup point (large flame, fig.1).

Burners	Power (W)	Ø of pots
Auxiliary	1000	10 - 14 cm
Semi-rapid	1750	16 - 18 cm
Rapid	3000	20 - 22 cm
Triple Ring	3800	24 - 26 cm

Notice

- When the equipment is not working, always check that the knobs are in the closing position (see fig.1).
- If the flame should blow out accidentally, the safety valve will automatically stop the gas supply, after a few seconds. To restore operation, set the knob to the lighting point (large flame, fig. 1) and press.
- While cooking with fat or oil, pay the utmost attention as these substances can catch fire when overheated.
- Do not use sprays near the appliance in operation.
- Do not place unstable or deformed pots on the burner, so as to prevent them from overturning or overflowing.

- Make sure that pot handles are placed properly.
- When the burner is started up, check that the flame is regular and, before taking pots away, always lower the flame or put it out.

CLEANING

Before any operation, disconnect the appliance from the electric grid. It is advisable to clean the appliance when it is cold.

Aluminium parts

The aluminium parts must be washed with a sponge and soapy water or with a light detergent. Do not use abrasive or corrosive products.

Do not leave substances, such as lemon or tomato juice, salt water, vinegar, coffee and milk on the enamelled surfaces for a long time.

Stainless steel and aluminium parts

Stainless steel and aluminium parts can be stained if it remains in contact with highly calcareous water or aggressive detergents for an extended period of time. The stainless steel and the aluminium parts should also be cleaned with soapy water and then dried with a soft cloth.

Burners and racks

These parts can be removed to make cleaning easier. The burners must be washed with a sponge and soapy water or with a light detergent, wiped well and placed in their housing perfectly. Make sure that the flame-dividing ducts are not clogged. Check that the feeler of the safety valve and the startup electrode are always perfectly cleaned, so as to ensure an optimum operation.

Gas taps

The possible lubrication of the taps must be carried out by specialized personnel, exclusively.

In case of hardening or malfunctions in the gas taps, contact Customer Service.

INSTRUCTIONS FOR THE INSTALLER



IMPORTANT NOTICE:

THE OPERATIONS INDICATED BELOW MUST BE FOLLOWED BY A LP GAS INSTALLER REGISTERED WITH THE LIQUEFIED PETROLEUM GAS ASSOCIATION OF SOUTHERN AFRICA. THE APPLIANCE MUST BE INSTALLED IN ACCORDANCE WITH THE REQUIREMENTS OF SANS 10087-1 AND ANY FIRE DEPARTMENT REGULATIONS AND/OR LOCAL BYLAWS APPLICABLE TO THE AREA.

THE MANUFACTURING FIRM REFUSES ALL RESPONSIBILITY FOR DAMAGES TO PEOPLE, ANIMALS OR THINGS, RESULTING FROM THE FAILURE TO COMPLY WITH SUCH PROVISIONS.

ATTENTION: THIS APPLIANCE MUST BE USED WITH A PRESSURE REGULATOR BALANCED AT 2.8 kPa, COMPLYING WITH THE REQUIREMENTS OF SANS1237.

INSTALLATION

Installing the top

The appliance is designed to be embedded into heat-resistant pieces of furniture.

The walls of the pieces of furniture must resist a temperature of 75°C. The equipment must not be installed near inflammable materials, such as curtains, cloths, etc.

Make a hole in the counter top of the piece of furniture, with the dimensions indicated on the cut-out dimension diagrams, at a distance of at least 50 mm from the appliance border to the adjacent walls.

Any possible wall unit over the cook-top must be placed at a distance of at least 760 mm from the top.

It is advisable to isolate the appliance from the piece of furniture below with a separator, leaving a depression space of at least 10 mm (fig. 3).

If the hob is going to be installed on the top of an oven, precautions must be taken to guarantee an installation in accordance with current accident prevention standards. Pay particular attention to the position of the electric cable and gas pipe: they must not touch any hot parts of the oven.

Moreover, if the hob is going to be installed on the top of a built in oven without forced cooling ventilation, proper air vents must be installed to guarantee an adequate ventilation, with the lower air entering with a cross section of at least 200 cm², and the higher air exiting with a cross section of at least 60 cm².

Fastening the top

Every cook-top is equipped with a special washer. A set of hooks is also supplied for mounting the cook-top.

Depending on the type of mounting surface, the suitable type of mounting hook is supplied.

For the installation proceed as follows:

- Remove the racks and burners from the top.
- Turn the appliance upside down and lay the washer S along the external border (fig. 4).
- Introduce and place the cook-top in the hole made in the piece of furniture, then block it with the V screws of the fastening hooks G (fig. 5).

Installation room

This appliance is not provided with a device for exhausting the products of combustion. Therefore, it is necessary to discharge the smoke outside. The room where this appliance is installed must have a natural air inflow, so as to ensure a regular gas combustion and room ventilation the necessary air volume must

not be lower than 20 m³.

Air must come from permanent openings made on the room walls that communicate with the outside. The section of these openings shall correspond to at least 200 cm².

Installation room - FOR THE U.K. ONLY

The room containing this hotplate should have an air supply in accordance with BS 5440: Part 2: 1989.

- All rooms require an openable window, or equivalent and some rooms will require a permanent vent a well.
- For room volumes up to 5 m³ an air vent of 100cm² is required.
- For room volumes between 5 m³ and 10 m³ an air vent of 50 cm² is required.
- If the room is greater than 5 m³ and has a door that opens directly to the outside, then no air vent is required.

If there are other fuel burning appliances in the same room BS 5440: Part 2:1989 should be consulted to determine the air vent requirements.

Gas connection

Make sure that the appliance is adjusted for the gas type available (see the label under the appliance).

Follow the instructions indicated in the chapter "gas transformations and adjustments" for the possible adaptation to different gases.

The appliance must be connected to the gas system by means of rigid copper pipes or flexible steel pipes having continuous walls, in compliance with the regulations in force. Some models are equipped with both cylindrical A and conical B connectors for gas supply (fig. 6).

Please select the type which is correct for the supply concerned.

The connection must not stress the gas ramp.

Once the installation is complete, check the connection seal with a soapy solution.


Electric connection

The connection to the electric grid must be carried out by qualified personnel and in conformity with the regulations in force. The voltage of the electric system must correspond to the value indicated in the label under the appliance.


Make sure that the electric system is provided with an effective ground connection in compliance with the regulations and provisions of the law. **Grounding is compulsory.**

CUT-OUT INSTALLATION DIAGRAMS

MODEL NUMBER: C6043G-M
PNC NUMBER: 943000737

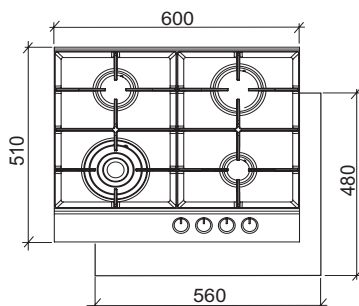

MODEL NUMBER: C9053G-M
PNC NUMBER: 943000739

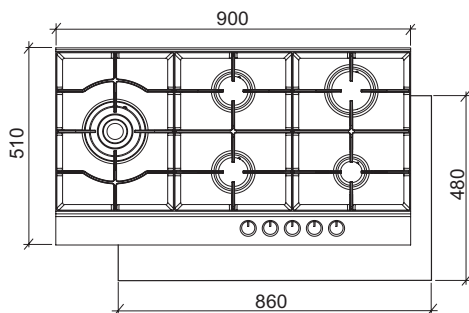

INSTRUCTIONS FOR THE INSTALLER

GAS TRANSFORMATIONS AND ADJUSTMENTS

Replacing the nozzles

If the equipment is adjusted for a type of gas that is different from the one available, it is necessary to replace the burner nozzles.

The choice of the nozzles to replace must be made according to the table of the "technical characteristics" as enclosed.

Act as follows:

- remove the racks and burners.
- by means of a straight spanner L, unscrew the nozzle U (fig. 7) and substitute it with the corresponding one.
- tighten the nozzle strongly.

Adjusting the burners

The lowest flame point must always be properly adjusted and the flame must remain on even if there is an abrupt shift from the maximum to the minimum position.

If this is not so, it is necessary to adjust the lowest flame point as follows:

- start the burner up;
- turn the tap up to the minimum position (small flame);
- remove the knob from the tap rod;
- introduce a flat-tip screwdriver in the hole F of the tap (fig. 8) and turn the by-pass screw up to a proper adjustment of the lowest flame point.

As regards propane gas burners, the by-pass screw must be tightened completely.

MAINTENANCE


Replacing the power supply cable










If the power supply cable should be replaced, it is necessary to use a cable with a section of 3x0.75mm², type H05VV-F or H05RR-F, complying with the regulations in force.

The connection to the terminal board must be effected as shown in fig. 9:

brown cable L (phase)

blue cable N (neutral)

green-yellow cable  (ground)

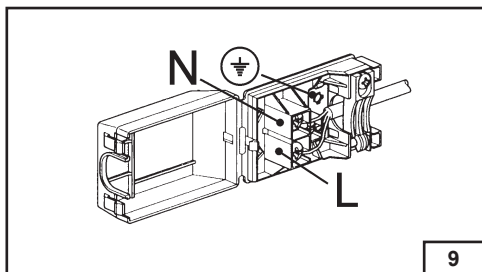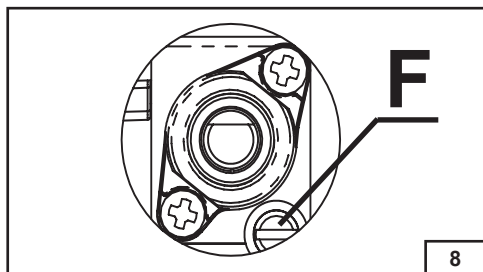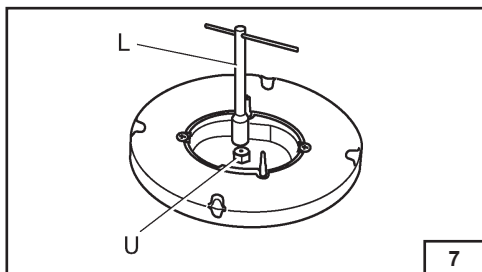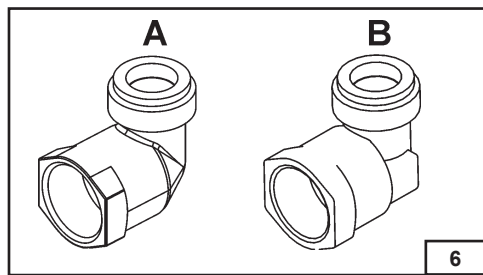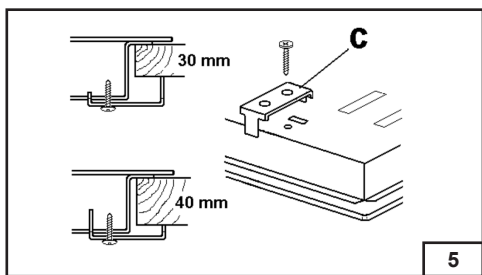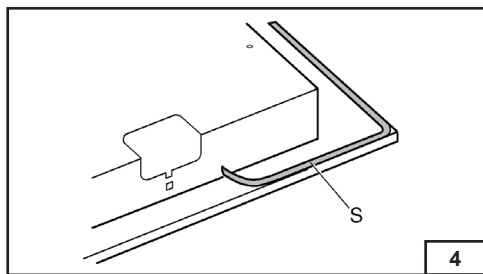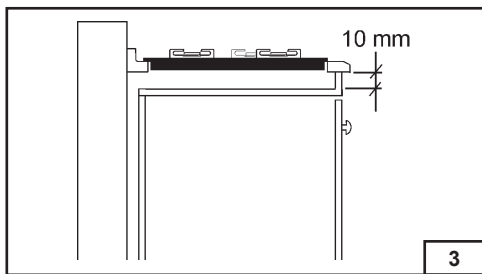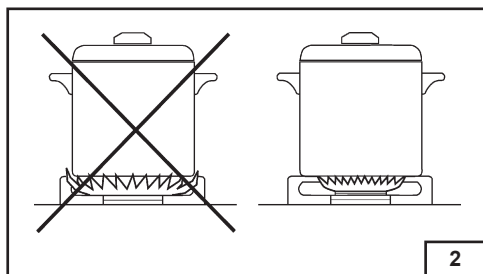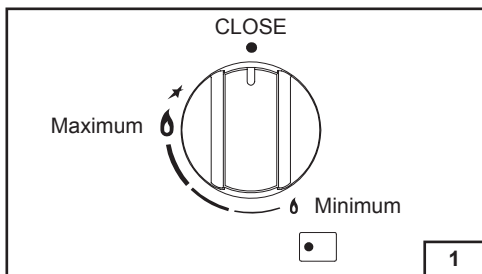

TECHNICAL CHARACTERISTIC TABLES

BURNERS		GAS	NORMAL PRESSURE	NOMINAL RATE		INJECTOR DIAMETER	TYPE BY PASS DIAMETER	NOMINAL HEAT INPUT (W)	
N°	DESCRIPTION			g/h	L/h			Max.	Min.
1	RAPID	LPG / G30	2.8	225	-	85	42	3000	950
		G31	3.7	214	-	85	42	3000	950
		G20	2.0	-	290	115Y	Reg.	3000	950
2	SEMI-RAPID	LPG / G30	2.8	126	-	65	31	1750	600
		G31	3.7	125	-	65	31	1750	600
		G20	2.0	-	165	97Z	Reg.	1750	600
3	AUXILIARY	LPG / G30	2.8	71	-	50	27	1000	450
		G31	3.7	71	-	50	27	1000	450
		G20	2.0	-	99	72X	Reg.	1000	450
4	TRIPLE RING	LPG / G30	2.8	278	-	98	60	3800	2100
		G31	3.7	272	-	98	60	3800	2100
		G20	2.0	-	367	135K	Reg.	3800	2100

This product complies with EU Directive 2002/96/EC.

The crossed-out dustbin symbol reported on the appliance indicates that the appliance must be disposed of separately from other domestic refuse at the end of its useful life. It must therefore be delivered to a waste recycling centre specifically for electric and electronic equipment or returned to the retailer at the moment of purchase of a new equivalent appliance.



The user is responsible for delivering the appliance to the appropriate collection centre at the end of its useful life. Failure to do so may result in a fine, as provided for by laws governing waste disposal.

Differential collection of waste products for eventual recycling, treatment and environmentally friendly disposal helps reduce possible negative effects on the environment and health, and also enables the materials making up the product to be recycled.

For more detailed information on the available refuse collection systems, refer to the local Municipal Solid Waste disposal centre or the shop where the product was purchased.

IMPORTANT SAFETY INFORMATION

READ THESE INSTRUCTIONS CAREFULLY BEFORE CONNECTING YOUR APPLIANCE TO THE GAS SUPPLY

These safety instructions should be retained for future reference

1. This appliance must only be installed by a registered LP Gas Installer and the installation is in compliance with the requirements of SANS 10087-1. Illegal installations may invalidate your warranty and could be dangerous.
2. Do not use this appliance in areas where there is not sufficient ventilation. This appliance consumes oxygen and it is dangerous to use this appliance in areas where there is insufficient ventilation as this may cause oxygen depletion and could endanger the life of the occupants of the area.
3. There are no user service points on this appliance. Servicing may only be done by a qualified technician. Service intervals are not specified as this depends on the use and the care you give the appliance. If any doubt as to the performance of the appliance call your dealer or the supplier. Do not modify the appliance in any way as this may make it unsafe and your guarantee may become null and void.
4. In the event of burn back (where the flame burns back to the jet), immediately turn off the gas supply by turning the control knob to the off position. After ensuring that the flame is extinguished, wait for 1 minute and re-light the appliance in accordance with the manufacturer's instructions. Should the appliance again burn back, close the valve and place a service call with your dealer or the supplier. Do not use the appliance again until the service technician has declared that it is safe to do so.
5. Do not use the appliance if it is leaking gas (see notes below on how to check for a gas leak). Do not check for gas leaks with a flame as this is extremely dangerous. To check for a gas leak ensure all control taps on the appliance are turned off and the gas supply is turned on to the appliance. Use a brush dipped in a soapy water solution (e.g.: water with dish washing liquid added) and apply the liquid by brush to the suspected areas such as the cylinder valve spindle or where the regulator screws into the cylinder. Also check the connections between the hose and regulator and between the hose and appliance. If there is a leak then bubbles will form. Should this happen, turn off the gas supply at the cylinder valve. Inspect the condition of the seal fitted on the regulator and ensure that it is in good condition. Refit the appliance to the cylinder and re-test using the soapy water solution. If the leak persists then place a call with your dealer or the supplier.
6. Electrical supply socket/switch. If a gas leak is suspected on the appliance. Switch off electrical supply at main board before unplugging or switching off supply at appliance socket. (in case of electrical spark).
7. The appliance must be used with an approved 2.8 kPa low pressure regulator complying with the requirements of SANS 1237. The type of gas for which the appliance is intended, LPG.



Service and Spares

In the event of your appliance requiring service, or if you wish to purchase spare parts, contact your local Electrolux Service Centre by telephoning:

0800 222 825 (Tollfree in South Africa)

Help us to help you

Please determine your type of enquiry before writing or telephoning. When you contact us we need to know:

- Your name
- **Telephone Number**
- Physical Address where appliance is located
- **Model and Serial Number of the appliance**
- Clear and concise details of the fault

Customer Care

For general enquiries or information regarding AEG appliances contact:

Customer Care Department
Electrolux South Africa (Pty) Ltd.
3rd Floor, DBM Gardens Building,
Raapenberg Road,
Mowbray, 7700,
Cape Town

Tel: 0800 222 825 (Tollfree in South Africa)

WARRANTY

This AEG product is covered by an Electrolux 3 year warranty for domestic use only.

For the 3 year warranty conditions please contact **Electrolux Customer Helpline 0800 222 825**.

Electrolux waives all liability for failure to observe the instructions for the appropriate installation, maintenance and use of the gas hob.